



## Afnameprocedure voor GBS-screening

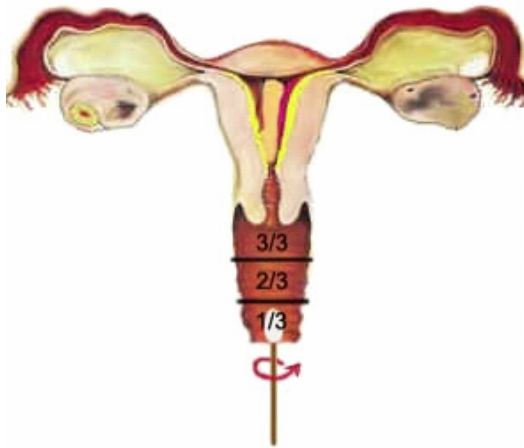

1. Wipe away excessive amount of vaginal secretion/discharge
2. Insert the swab into the vagina and sample secretions from mucosa of the lower one-third of the vagina

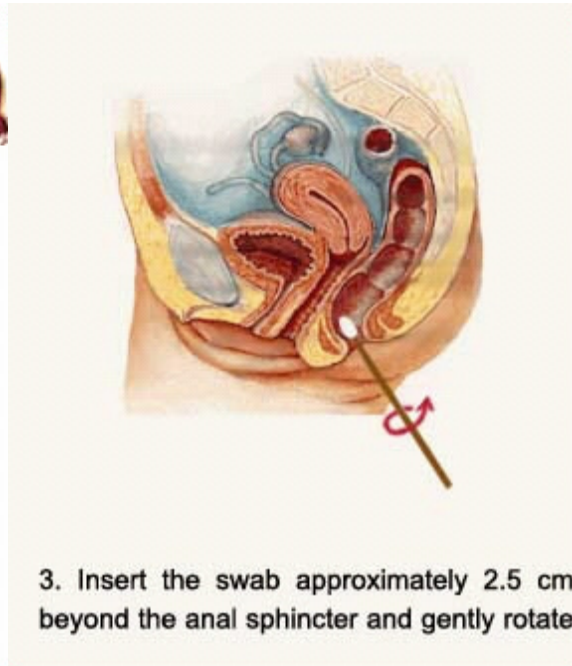

3. Insert the swab approximately 2.5 cm beyond the anal sphincter and gently rotate